

# Starter Disable Wiring Diagram

Using Clutch or Transmission Sense Wire

